

1. SPARE PARTS

Basic parts

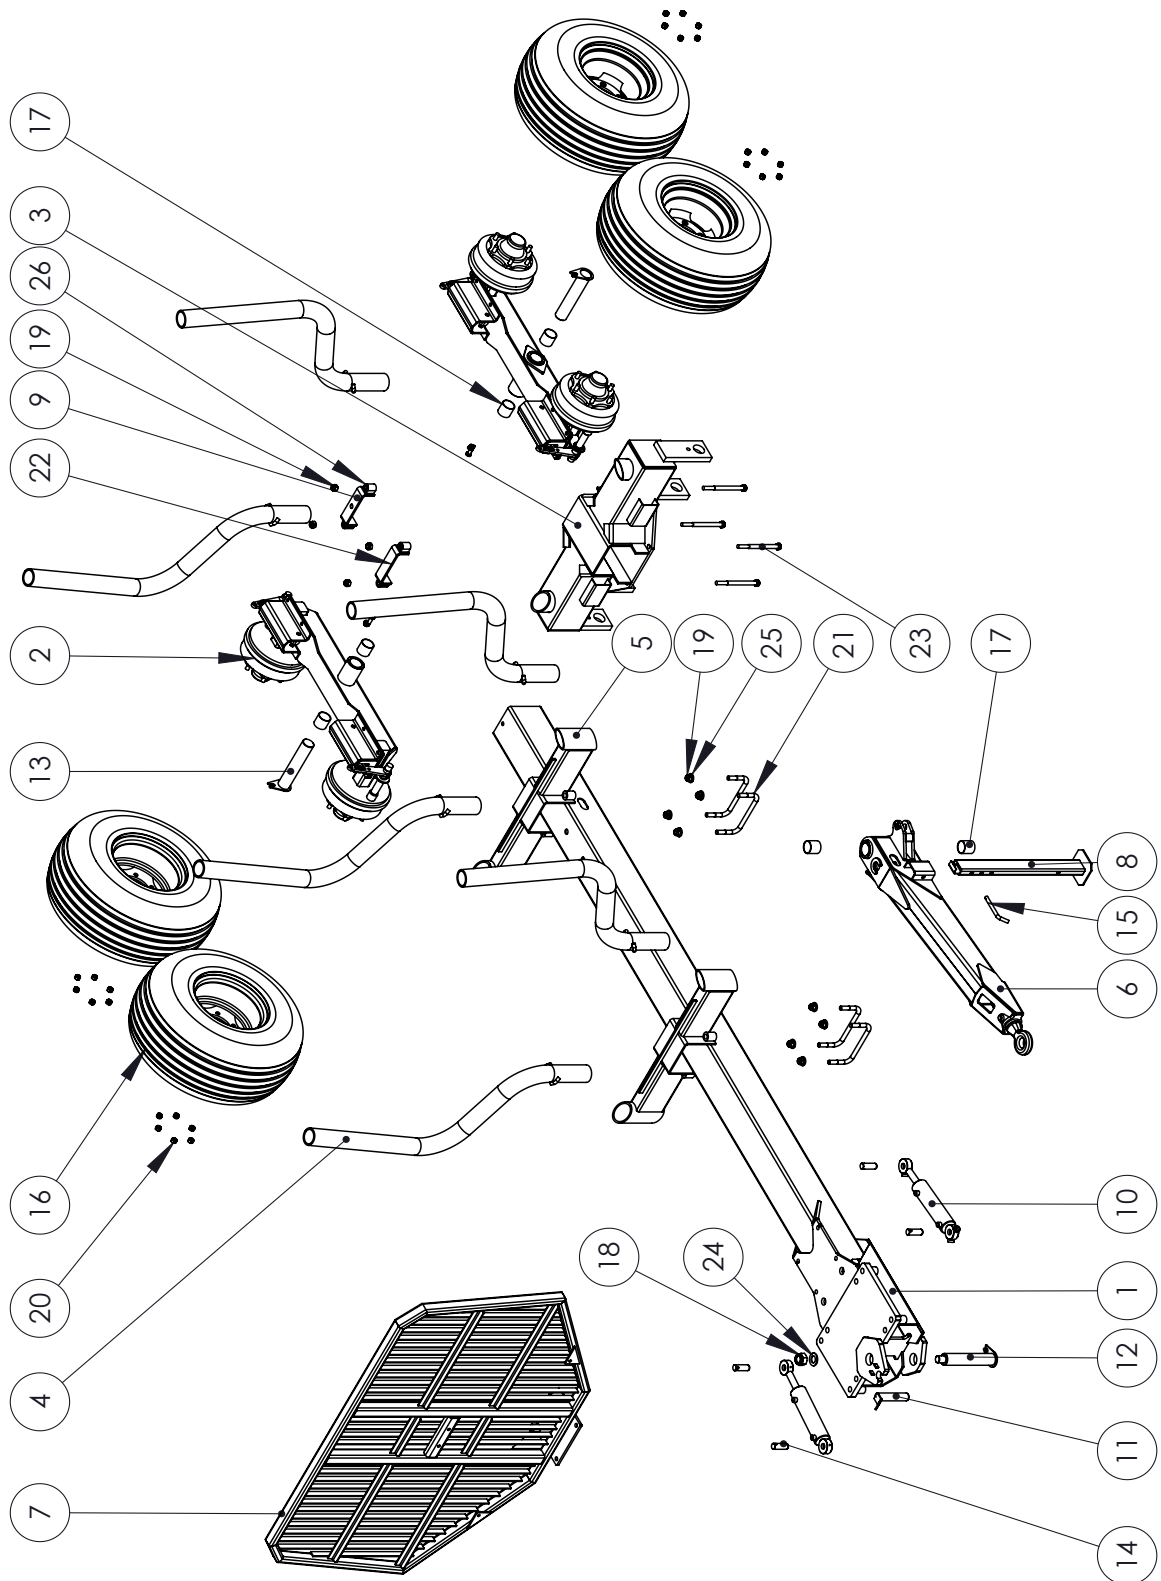


Figure 10. Spare parts of Palms 9S forest trailer

*FOREST TRAILER PALMS 9S*

<b>Pos</b>	<b>Qty</b>	<b>Part №</b>	<b>Part name</b>
1	1	9S.01.00.00	Chassis
2	2	BAL60-70-995.00.00	9S boogie
3	1	9.03.00.00B	9S boogie bunk
4	6	112.10.00.00	9S bolster
5	2	9S.04.00.00	9S bunk
6	1	9D.02.00.00B	9S drawbar
7	1	9S.04.02.00	9S safety screen
8	1	Park.I.L	Parking leg longer
9	1	9.08B.00.00	Clamp with tab
10	2	70-32-200	Drawbar turning cylinder
11	1	tl.00	Drawbar cylinder's locking pin
12	1	TK-60-292	Drawbar shaft threaded
13	2	T-60-315	Shaft of boogie
14	4	SA-30-89	Drawbar's cylinder shaft
15	1	tjs.01	Parking leg's pin
16	4	**	Wheel
17	6	L11FB0926060	Bronze slide bearing 60x60
18	1	M36n	Nut M36 DIN 985
19	12	M20n	Nut M20 DIN 985
20	24	M18x1,5	Wheel nut M18 x 1,5
21	4	K20-125-265	9S Clamp
22	1	9.08.00.00	9S Clamp
23	4	M24x200b	Hex head bolt M24 x 200 DIN 931

**Table 4.** *Spare parts list of Palms 9S forest trailer*